


How to Set Up Back-Button Focus

Canon DSLR and Mirrorless Cameras

Depending on which Canon model you are using, the Custom Menu will be laid out a bit differently, but in all recent models the following functions can be found in the Custom Function Menu:

1. Open Custom Functions in the Menu
2. Scroll to the Custom Controls screen
3. In the Custom Controls screen, set the shutter button to “metering start” (which stops the shutter button from engaging focus)
4. Set the AF-ON button to “Metering and AF start”

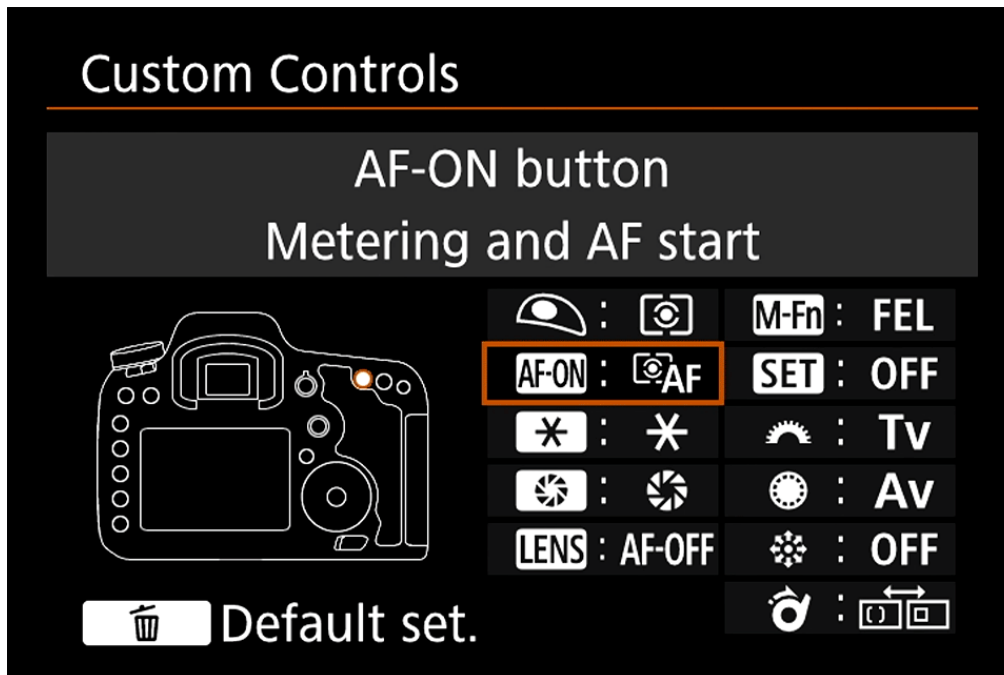


Nikon DSLR and Mirrorless Cameras

Depending on which Nikon model you use, the Custom settings Menu will be laid out a bit differently, but in all the recent models, the following settings can be found in the Custom Settings Menu:


1. Open the Custom Settings Menu
2. Select the “Autofocus” tab
3. Select “AF activation”
4. Select “AF-ON only”

How to Set Up Back-Button Focus

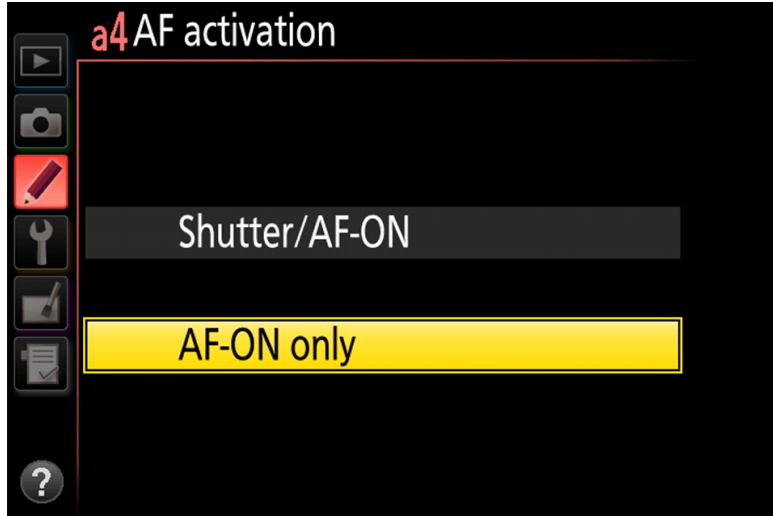

For Nikon models that don't have an AF-ON button, you will need to set up the AE-L / AF-L button in the Custom Settings Menu to use it as if it was an AF-ON button:

1. Open the Custom Settings Menu
2. Select "Controls" tab
3. Select "Assign AE-L/AF-L button"
4. Scroll through the different options in the menu until you find "AF-ON"
5. When on the "AF-ON" option, select "OK"

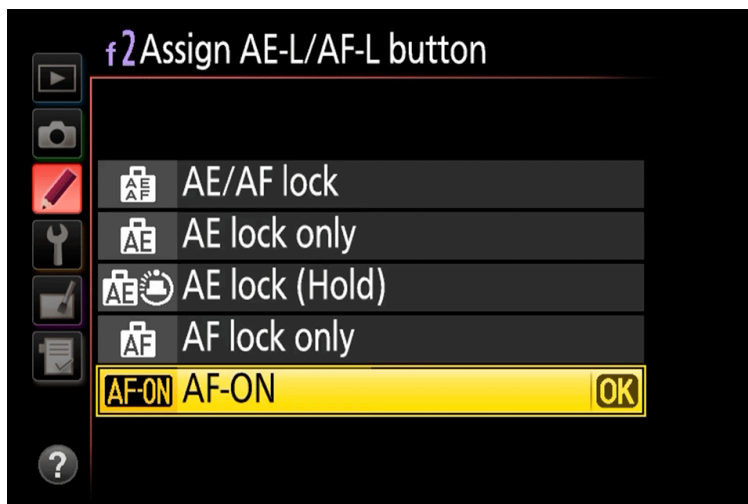

Sony Mirrorless Cameras

If you use a Sony mirrorless camera, you can also move the focusing button to one of many buttons. The latest mirrorless models have a dedicated "AF-ON" button that you can use for back-button focus.


How to Set Up Back-Button Focus

First, you need to de-couple autofocus from the shutter release. This can be done by visiting the menu and finding the “AF w/ shutter” option. Make sure to turn it off.

1. Press the Menu button
2. Find “AF w/ shutter” menu and set it to “Off”



Pressing the AF-ON button should now work for focusing. Make sure that it has not been previously set for something else though. Visit the “Custom Key” menu of your Sony camera and find the “AF-ON Button” assignment. Make sure that it is set to “AF On”, as shown below:

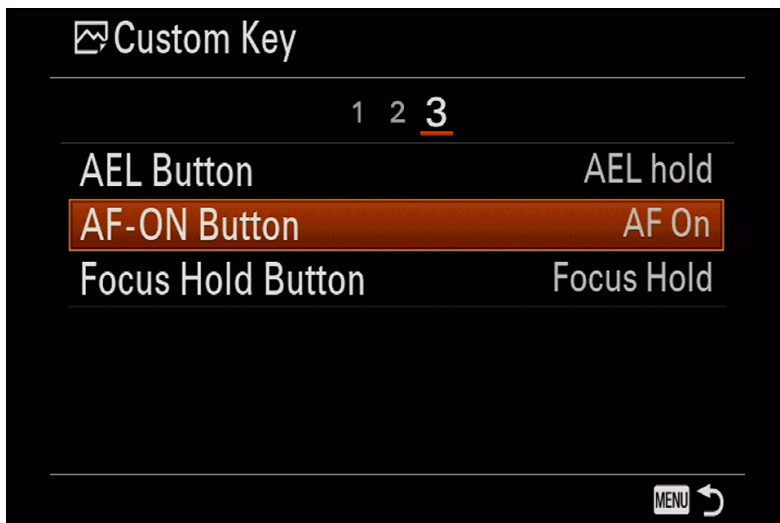

How to Set Up Back-Button Focus

Fujifilm GFX and X Mirrorless Cameras

Back-button focus on Fuji cameras is performed a little differently from model to model. Below is how you do it on some of the latest mirrorless models:

1. Open “Set Up” in the menu
2. Select “Button/Dial Setting”, pick Fn/AE-L/AF-L Button Setting, and assign AE-L or AF-L button to “AF-ON”.
3. In “Button/Dial Setting”, set “Shutter AF” to “Off”

If you have a Fuji camera that has a dedicated AF-ON button (such as the GFX 50S or the X-H1), then you need to perform the following:

1. Open “Set Up” in the menu
2. Select “Function (Fn) Setting” and make sure that “AF-ON” is set to “AF-ON”
3. Select “Button/Dial Setting”
4. Set “Shutter AF” to “Off” for both “AF-S” and “AF-C”

Fuji cameras have another method to perform back-button focus by allowing a button to perform focusing even when switched to manual focus. Here is how you set it up:

1. Switch the focus selection dial to Manual (M).
2. Open “AF/MF” in the menu
3. Select “Instant AF Setting”
4. Set “AF-C”